

Patrol Power Gen II Connector Disassembly

It is critical that the connectors be removed from the main unit by pulling straight away from unit. Do not wiggle or force the connectors.

There is a white locking tab (photo 1) on the 6 position connector which must be in the unlocked position (photo 2) prior to attempting to remove. This can be done with a fingernail or small screwdriver.

The 23 position connector features a locking tab that must be lifted in order to remove the connector. While lifting, pull out the connector (photo 3).

The 6 position connector features a locking tab that must be depressed in order to remove the connector. While depressing, pull out the connector (photo 4).

